




CATALOG OF REPLACEMENT PARTS

A120 Series Mixers ML-104865



Table of Contents

5	SWITCH AND TIMER UNIT
7	PLANETARY AND ATTACHMENT HUB UNIT
9	BASE UNIT
11	PEDESTAL AND BOWL UNIT
13	TRANSMISSION CASE AND SHIFTER UNIT
15	MOTOR PARTS
17	TRANSMISSION GEAR UNIT
19	AGITATORS

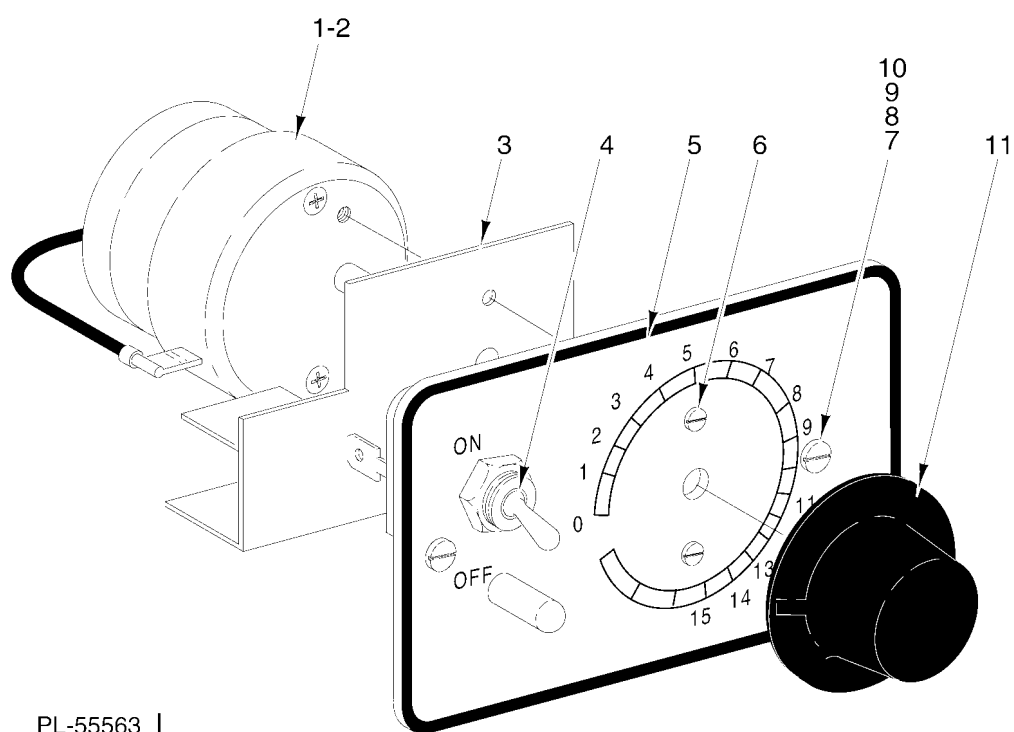


PL-55563

SWITCH AND TIMER UNIT

SWITCH AND TIMER UNIT


ILLUS.	PART NO.	NAME OF PART	AMT.
PL-55563			
1	00-294650-004-1	Timer Assy. (115 V., 60 Hz.).....	1
2	00-294650-004-4	Timer Assy. (220 V., 50 Hz.).....	1
3	00-291746	Insulator - Switch.....	1
4	00-875567	Switch Assy.....	1
5	00-873115-00001	Switch Plate & Pin Assy.....	1
6	SC-013-07	Mach. Screw 5-40 x 1/4 Slotted Flat Hd.....	2
7	00-123109	Screw 6-32 x 3/8 Serrated Hd.....	2
8	SC-027-28	Mach. Screw 8-32 x 1/4 Rd. Hd. (Grounding Screw).....	1
9	WL-011-01	Lockwasher #8 Internal Shakeproof(Grounding Screw)(1 Ph.).....	2
10	NS-010-11	Nut 8-32 Hex (Brass).....	1
11	00-291748	Knob - Timer.....	1

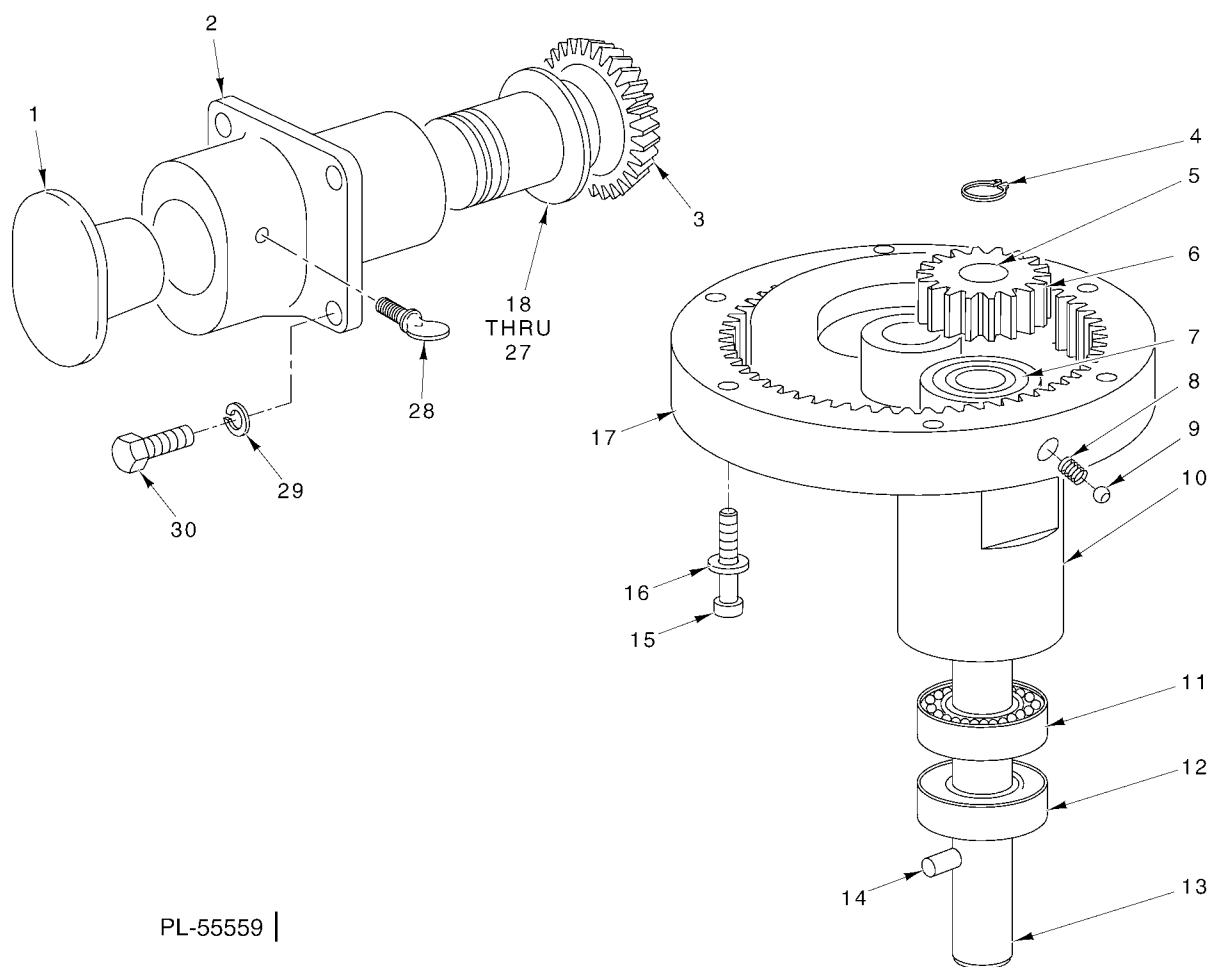

PLANETARY AND ATTACHMENT HUB UNIT

PLANETARY AND ATTACHMENT HUB UNIT

ILLUS.	PART NO.	NAME OF PART	AMT.
PL-55559			
1	00-114824-00001	Plug - Attachment Hub.....	1
2	00-435047-00004	Hub - Attachment (Painted).....	1
3	00-435065-00002	Bevel Drive Gear & Seal Assy.....	1
4	RR-004-18	Retaining Ring.....	1
5	00-012430-00048	Key 3/16 x 3/16 x 4.....	1
6	00-012683	Pinion - Beater (17T).....	1
7	BB-018-17	Ball Bearing.....	1
8	00-007094	Spring.....	2
9	BA-002-09	Ball 1/4 Dia.....	2
10	00-113953	Planetary (Painted).....	1
11	BB-018-17	Ball Bearing.....	1
12	00-121814	Seal - Oil (1 In. I.D.).....	1
13	00-113949	Agitator Shaft Assy. (Incls. Item 14).....	1
14	00-065062-00002	Pin - Dowel.....	1
15	SC-040-08	Cap Screw 1/4-20 x 1 Fil. Hd.....	6
16	WL-003-35	Lockwasher 1/4 Helical.....	6
17	00-012682	Internal Gear (63T) (Incls. Items 8 & 9).....	1
18	00-012746-00019	Washer - Thrust (0.115 In. Thk.).....	AR
19	00-012746-00005	Washer - Thrust (0.080 In. Thk.).....	AR
20	00-012746-00006	Washer - Thrust (0.106 In. Thk.).....	AR
21	00-012746-00007	Washer - Thrust (0.092 In. Thk.).....	AR
22	00-012746-00008	Washer - Thrust (0.086 In. Thk.).....	AR
23	00-012746-00009	Washer - Thrust (0.098 In. Thk.).....	AR
24	00-012746-00010	Washer - Thrust (0.112 In. Thk.).....	AR
25	00-012746-00012	Washer - Thrust (0.119 In. Thk.).....	AR
26	00-012746-00013	Washer - Thrust (0.121 In. Thk.).....	AR
27	00-012746-00016	Washer - Thrust (0.129 In. Thk.).....	AR
28	00-108197-00001	Thumb Screw 1-1/4.....	1
29	WL-019-79	Lockwasher #12 Light.....	4
30	SC-119-07	Mach. Screw 12-24 x 3/4 Flat Hd. (Painted).....	4

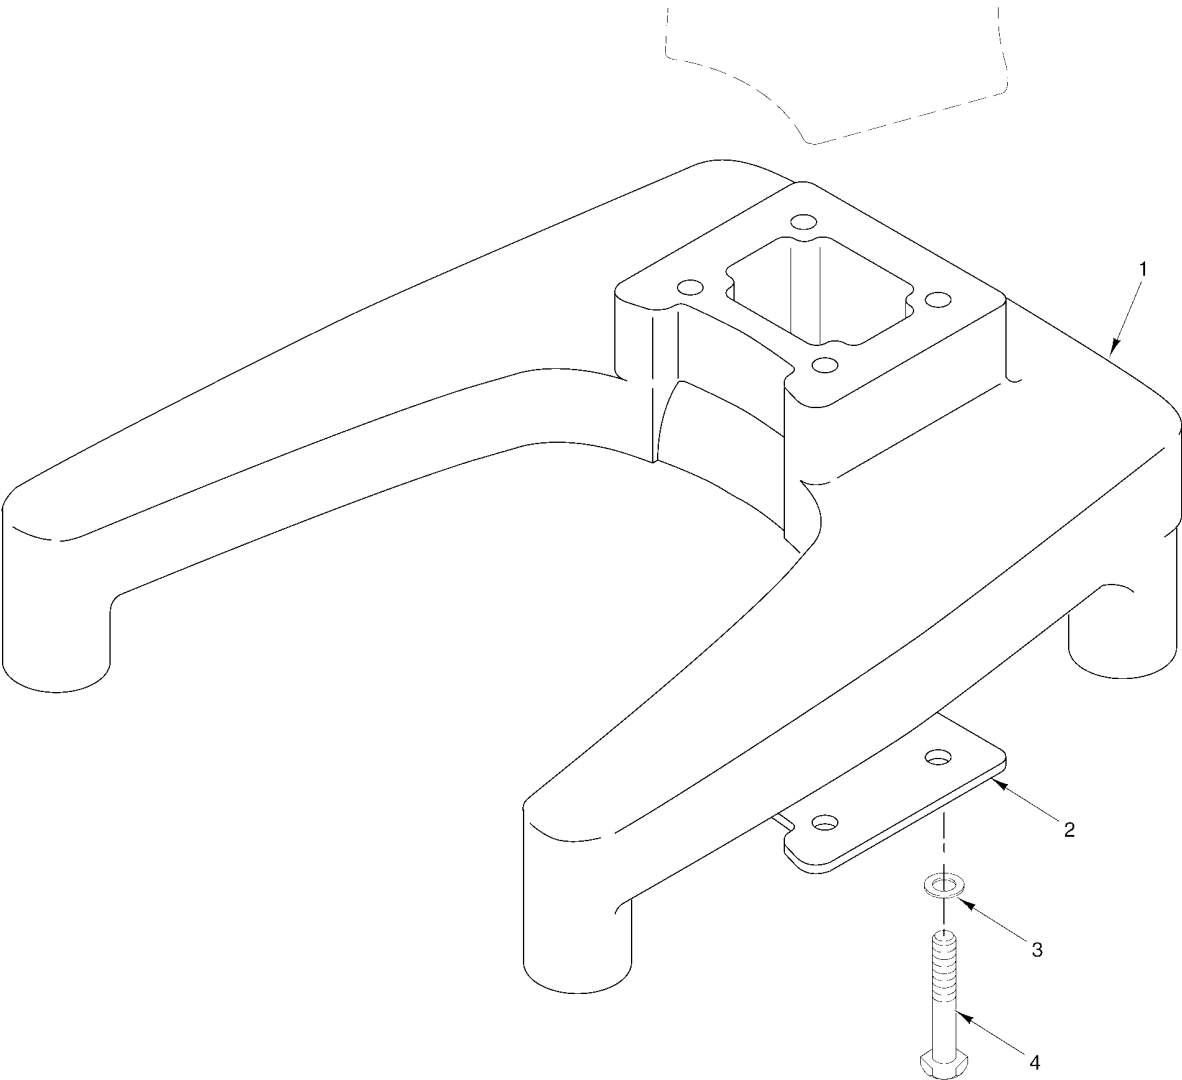


PL-55481

BASE UNIT

BASE UNIT

ILLUS.	PART NO.	NAME OF PART	AMT.
PL-55481			
1	00-873229-00003	Base (Painted).....	1
2	00-108159	Screen - Air.....	1
3	WS-018-19	Washer.....	4
4	SC-097-53	Cap Screw 3/8-16 x 2-1/4 Hex Hd.....	4

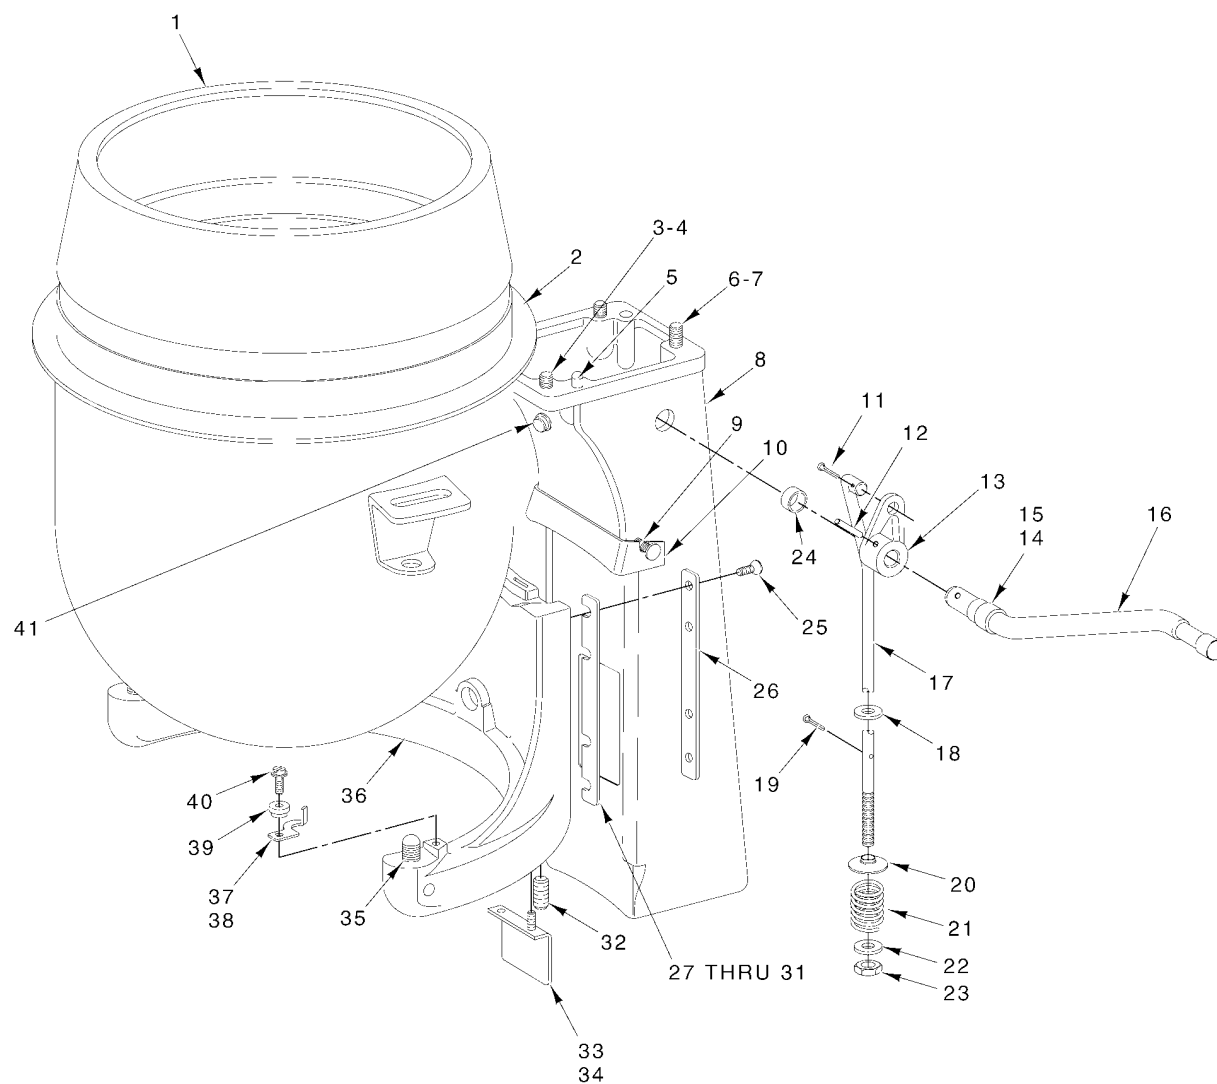


PL-55561

PEDESTAL AND BOWL UNIT

PEDESTAL AND BOWL UNIT

ILLUS.	PART NO.	NAME OF PART	AMT.
PL-55561			
1	00-438078	Splash Cover & Bowl Extension (12 Qt.).....	1
2	00-295643	Bowl Assy. (12 Qt.) (SST) (Packaged).....	1
3	WL-006-22	Lockwasher 5/16 Light.....	2
4	SC-041-13	Cap Screw 5/16-18 x 1 Hex Hd. (SST).....	2
5	00-270776	Dowel.....	2
6	WL-006-22	Lockwasher 5/16 Light.....	2
7	SC-011-95	Mach. Screw 5/16-18 x 1 Fil. Hd.....	2
8	00-078634-00002	Pedestal.....	1
9	00-070641-00011	Thumb Screw 8-32 Special.....	2
10	00-078506	Shield - Upper Splash.....	1
11	PC-003-55	Cotter Pin 1/8 x 3/4.....	1
12	PS-004-15	Spiral Pin 1/4 Dia. x 1-1/8 Lg.....	1
13	00-012713	Handle - Bowl Lift.....	1
14	WS-009-11	Washer.....	AR
15	WS-009-13	Washer (Fiber).....	AR
16	00-114432	Lift Handle Assy.....	1
17	00-012714	Rod - Bowl Lift.....	1
18	WS-006-46	Washer.....	2
19	PC-003-55	Cotter Pin 1/8 x 3/4.....	1
20	00-012745	Washer - Special.....	1
21	00-012782	Spring.....	1
22	WS-006-26	Washer.....	1
23	NS-036-15	Stop Nut 3/8-24 Hex Special.....	1
*24	00-479510	Bushing - Bowl Lift.....	2
25	SC-022-20	Mach. Screw 10-24 x 5/8 Flat Hd.....	8
26	00-012715	Gib - Bowl Support.....	2
27	00-016388-00001	Shim - Bowl Support (0.003 In. Thk.).....	AR
28	00-016388-00004	Shim - Bowl Support (0.009 In. Thk.).....	AR
29	00-016388-00005	Shim - Bowl Support (0.005 In. Thk.).....	AR
30	00-016388-00006	Shim - Bowl Support (0.007 In. Thk.).....	AR
31	00-016388-00007	Shim - Bowl Support (0.015 In. Thk.).....	AR
32	00-121625	Set Screw - Special.....	1
33	SC-060-56	Mach. Screw 10-32 x 5/16 Rd. Hd.....	2
34	00-078505	Shield - Lower Splash.....	1
35	00-478582	Pin - Bowl Locating.....	2
36	00-024870	Bowl Support Assy. (Incls. Item 32).....	1
37	00-291444-00001	Clamp - Bowl (LH).....	1
38	00-291444-00002	Clamp - Bowl (RH Shown).....	1
39	00-291263	Washer - Belleville.....	6
40	00-274614	Screw - Pivot.....	2
41	00-087711-252-1	Switch - Reed.....	1

* Used On Starting Serial Number #31-1259-262.

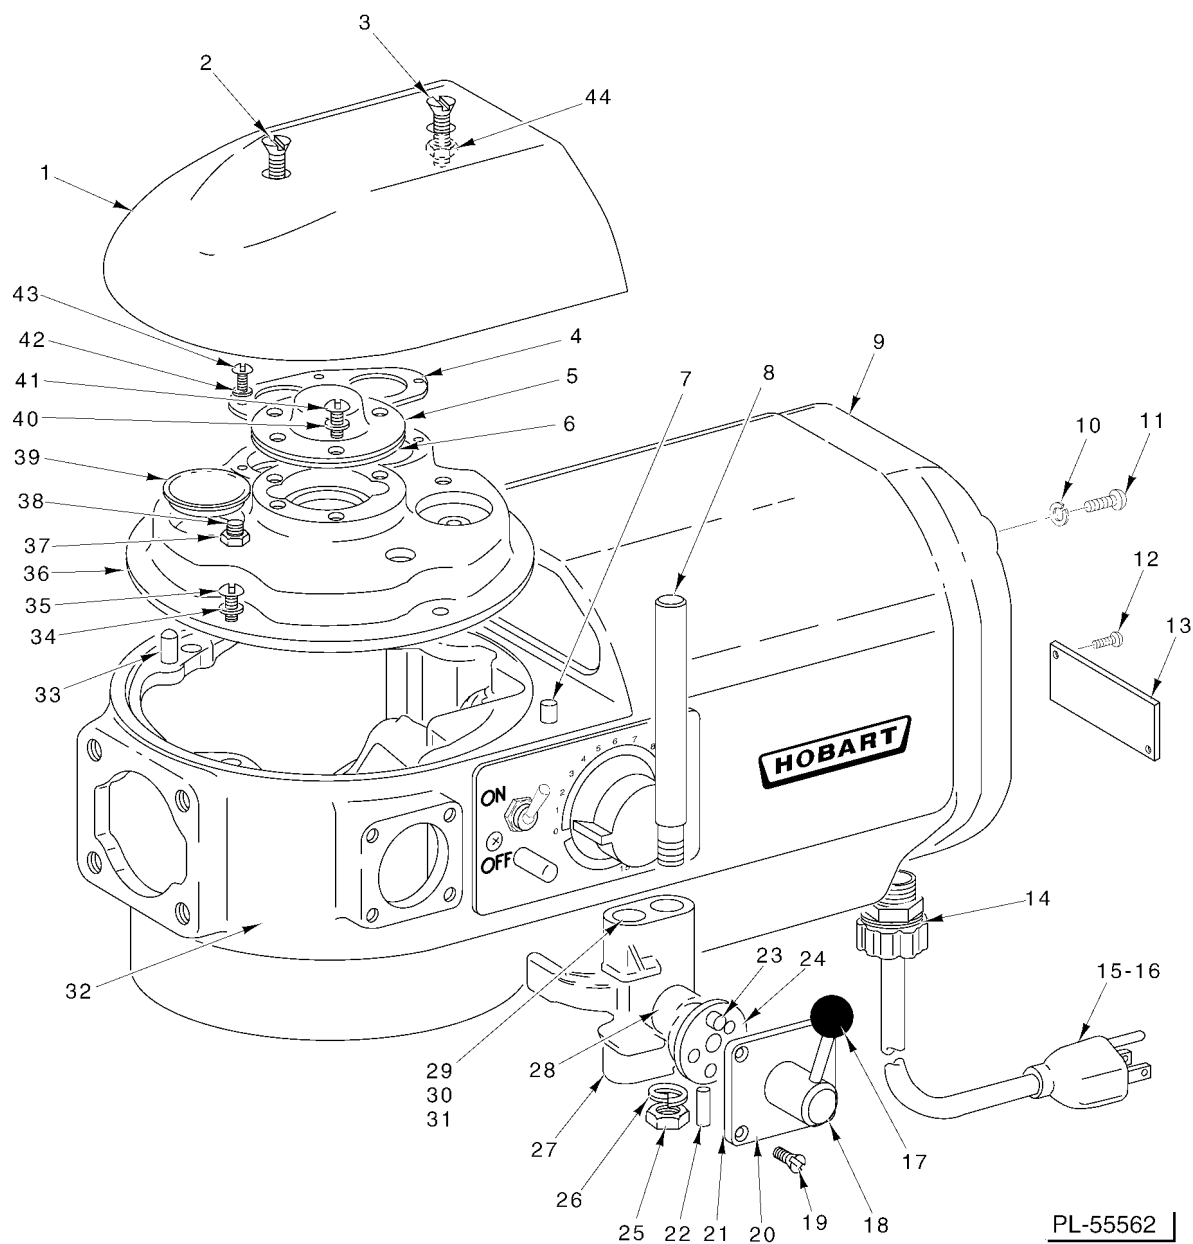


PL-55562

TRANSMISSION CASE AND SHIFTER UNIT

TRANSMISSION CASE AND SHIFTER UNIT

ILLUS.	PART NO.	NAME OF PART	AMT.
PL-55562			
1	00-018231-00003	Cover - Transmission Case (Painted).....	1
2	SC-016-17	Mach. Screw 12-24 x 1 1/4 Oval Hd.....	1
3	SC-015-57	Mach. Screw 12-24 x 1 1/2 Oval Hd.....	1
4	00-012708	Retainer - Twin Bearing.....	1
5	00-020394-00001	Cap - Bearing Retainer.....	1
6	00-020395	Retainer - Bearing.....	1
7	00-011800-00061	Dowel.....	2
8	00-012735	Rod - Shifter Guide.....	1
9	00-873802-00005	Cover - Back (Painted).....	1
10	WL-003-28	Lockwasher #12 Light.....	4
11	SC-127-85	Mach. Screw 12-24 x 2 1/2 Pan Hd.....	4
12	SC-009-49	Mach. Screw 6-32 x 3/8 Slotted Rd. Hd.....	2
13	00-115231-00002	Cover - Conduit.....	1
14	FE-022-84	Strain Relief 1/2 NPT.....	1
15	00-117542-00081	Cord & Plug Assy. (3 Cnd., Under 150 V.).....	1
16	00-117542-00080	Cord Assy. (I.E.C.).....	1
17	00-077401	Knob.....	1
18	00-875241	Handle - Shifter (Incls. Item 17).....	1
19	SC-015-34	Mach. Screw 10-24 x 1/2.....	4
20	00-290115-00001	Plate - Shifter Index.....	1
21	00-023946	Gasket - Shifter Index Plate.....	1
22	PS-003-08	Spiral Pin 1/8 Dia. x 3/4 Lg.....	1
23	BA-002-09	Ball 1/4 Dia.....	2
24	00-111170	Spring - Detent.....	2
25	NS-013-22	Nut 3/8-16 Hex.....	1
26	WL-004-06	Lockwasher 3/8 Helical.....	1
27	00-013160	Yoke - Shifter.....	1
28	00-873504	Cam - Gear Shifter.....	1
29	00-012733	Plunger - Shifter Yoke.....	2
30	00-012734	Spring - Shifter Yoke.....	2
31	00-012732	Retainer - Shifter Yoke Spring.....	2
32	00-873140-00001	Case - Transmission (Incls. Items 7 & 33).....	1
33	00-011800-00116	Dowel.....	1
34	WL-003-28	Lockwasher #12 Light.....	4
35	SC-119-07	Mach. Screw 12-24 x 3/4 Hex Hd.....	4
36	00-067750	Transmission Shaft Support & Screw Assy. (Incls. Items 37 & 38).....	1
37	NS-009-36	Mach. Nut 12-24 Hex.....	1
38	SC-008-56	Mach. Screw 12-24 x 1/2 Slotted Rd. Hd.....	1
39	00-064871	Plug - Friction.....	2
40	WL-003-28	Lockwasher #12 Light.....	3
41	SC-008-48	Mach. Screw 12-24 x 1/2 Slotted Rd. Hd.....	3
42	WL-003-22	Lockwasher #10 Light.....	4
43	SC-018-01	Mach. Screw 10-24 x 3/8 Slotted Pan Hd.....	4
44	NS-009-36	Mach. Nut 12-24 Hex.....	2
	00-875249	Shifter Assy. (Incls. Items 18, 20, 22, 23, 24, & 28).....	1

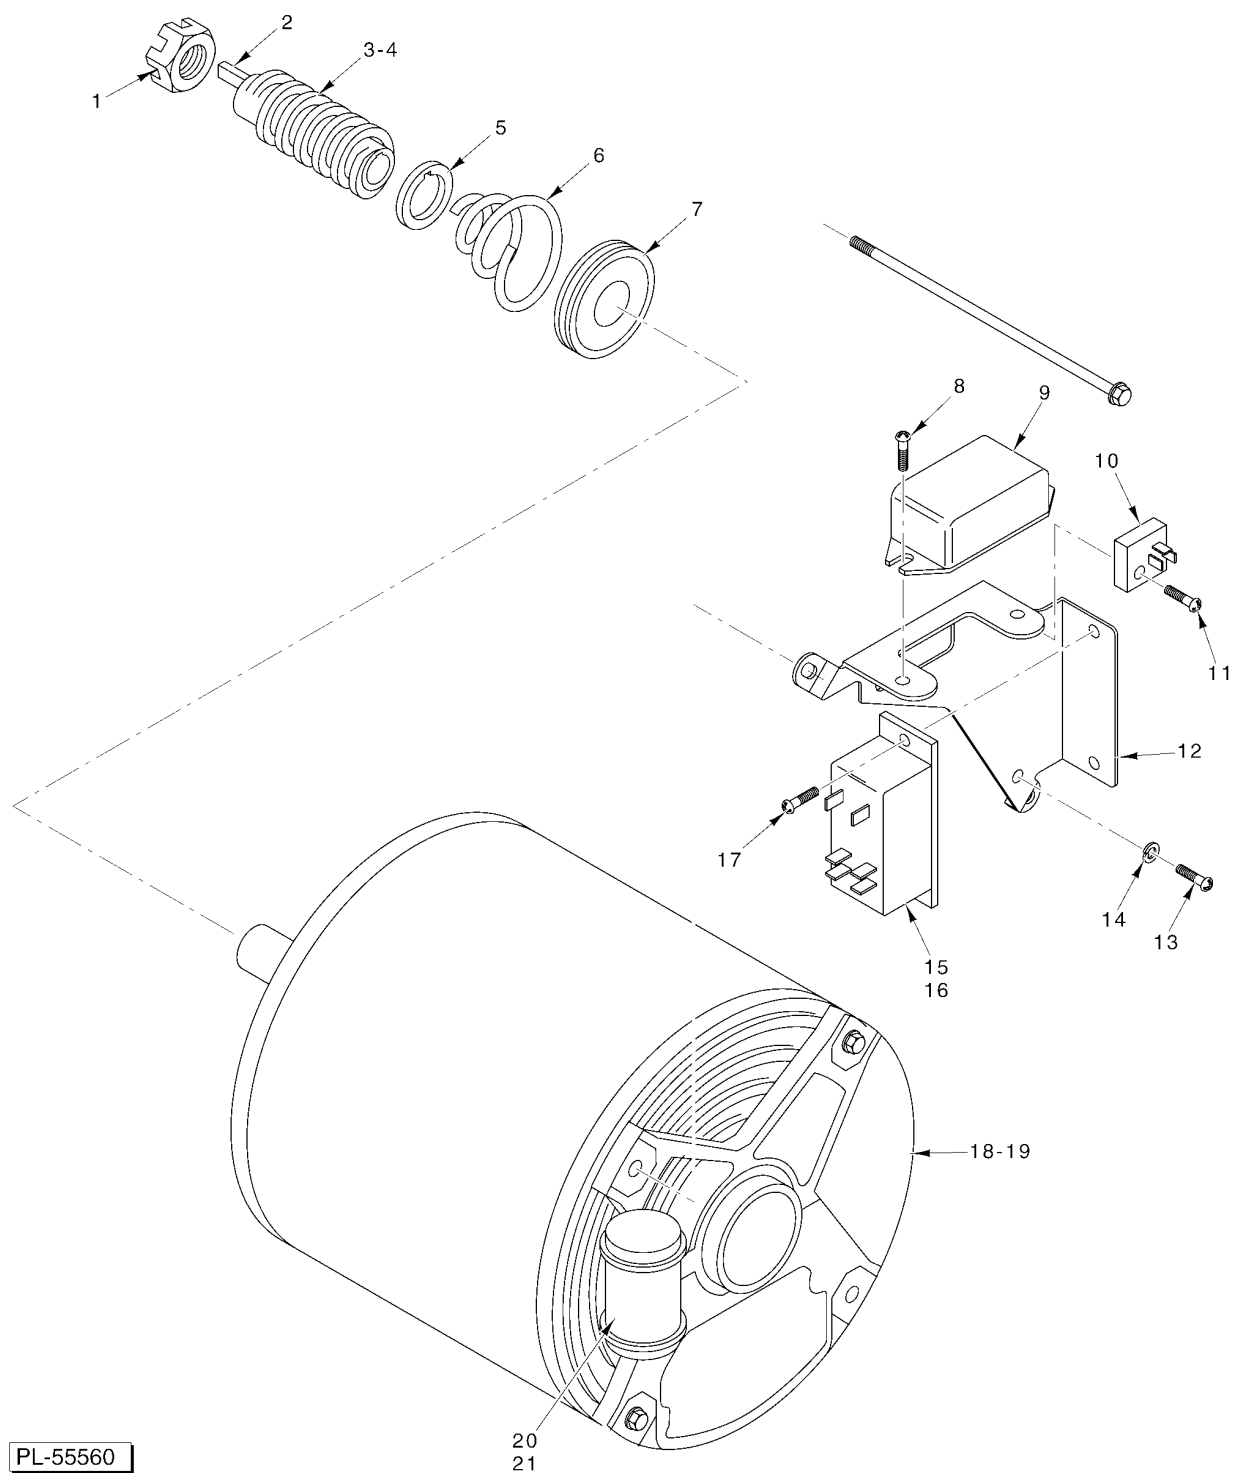


PL-55560

MOTOR PARTS

MOTOR PARTS

ILLUS.	PART NO.	NAME OF PART	AMT.
PL-55560			
1	NS-032-23	Lock Nut.....	1
2	00-012430-00004	Key 1/8 x 1/8 x 1/4.....	1
3	00-291221	Gear - Worm (60 Cycle).....	1
4	00-070407	Gear - Worm (50 Cycle).....	1
5	00-012754	Washer.....	1
6	00-012757	Spring - Shock Absorber.....	1
7	00-873057	Deflector - Grease.....	1
8	SD-015-38	Self-Tapping Screw 6-32 x 3/8 Phil. Pan Hd., Type TT.....	2
9	00-271612-00002	Switch - Electronic Start (50/60 Hz.).....	1
10	00-873203-00002	Block - Terminal.....	1
11	SD-015-38	Self-Tapping Screw 6-32 x 3/8 Phil. Pan Hd., Type TT.....	1
12	00-873125	Bracket - Component Mounting.....	1
13	SD-015-39	Self-Tapping Screw 8-32 x 1/4 Phil. Pan Hd., Type TT.....	2
14	WL-008-07	Lockwasher 8 Internal Shakeproof.....	2
15	00-087714-042-1	Relay (2-Pole) (120 VAC) (30 Amp.).....	1
16	00-087714-042-3	Relay (2-Pole) (240 VAC).....	1
17	SD-015-38	Self-Tapping Screw 6-32 x 3/8 Phil. Pan Hd., Type TT.....	2
18	00-873061-00001	Motor Assy. (60 Hz.).....	1
19	00-873061-00003	Motor Assy. (50 Hz.).....	1
20	00-113703	Cable Tie.....	2
21	00-070487-00025	Capacitor - Motor Start.....	1

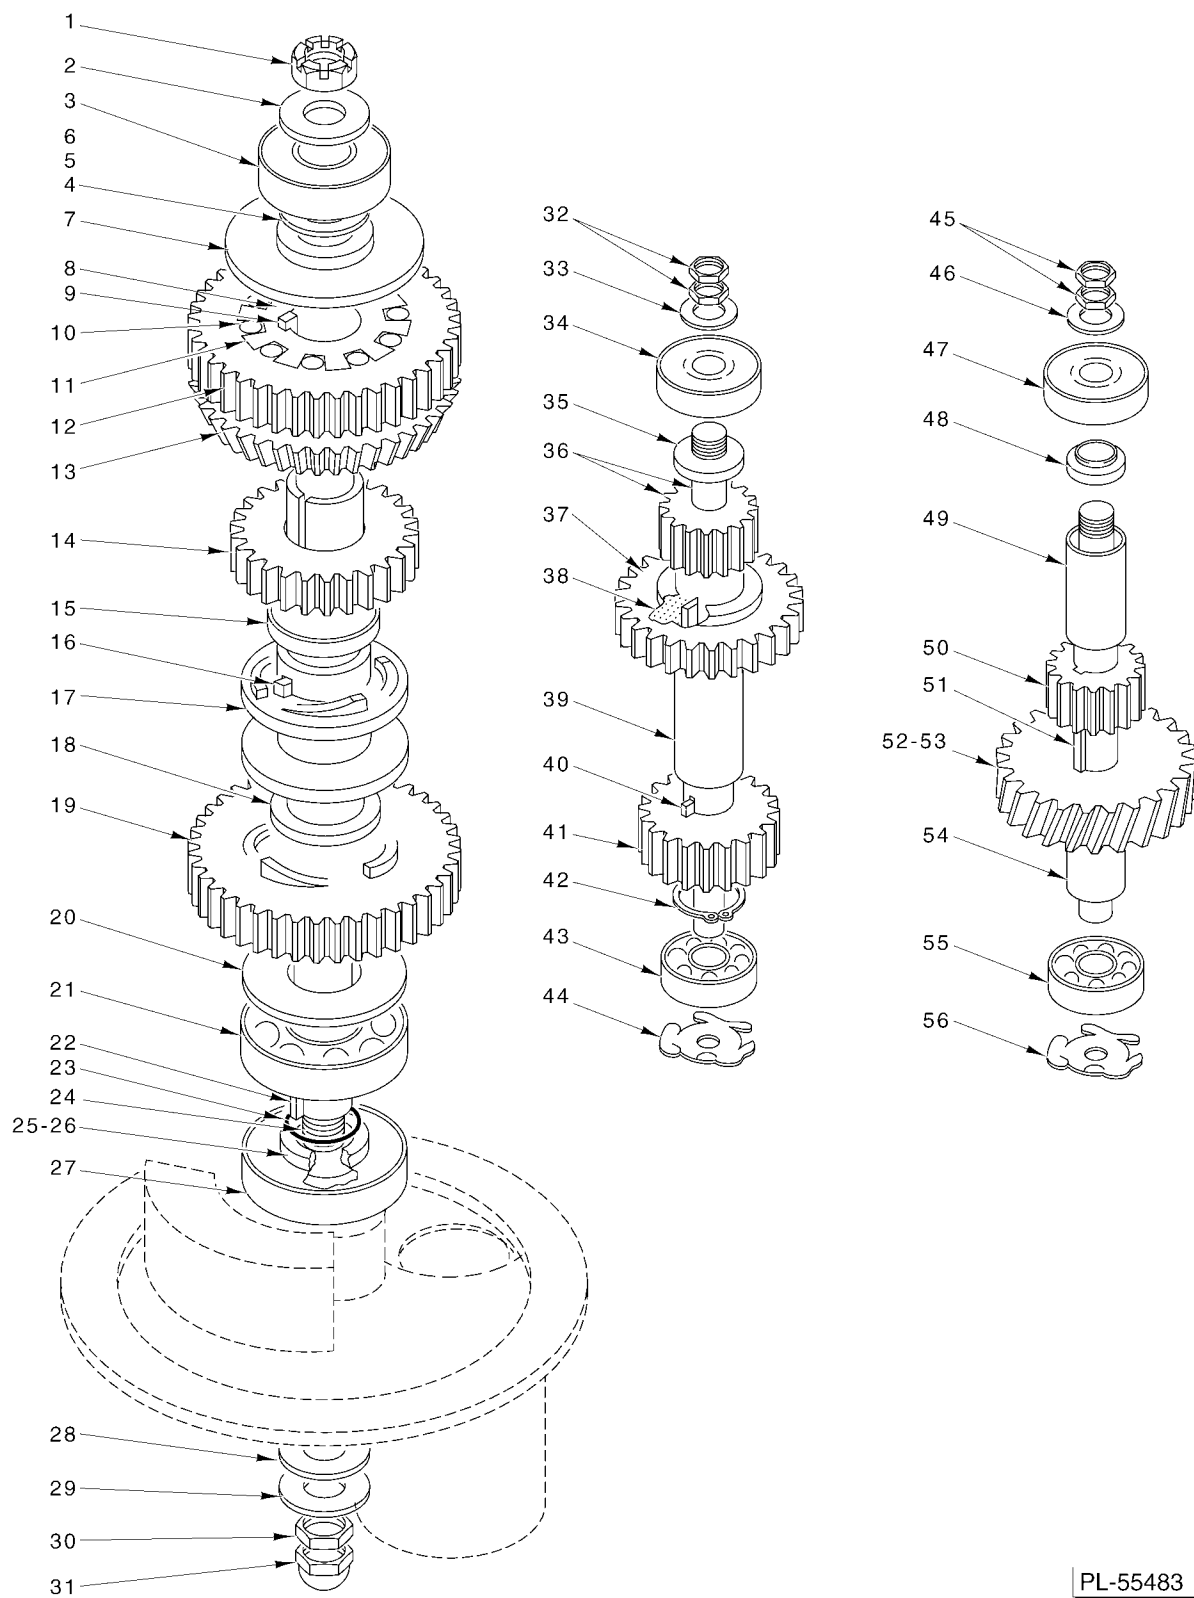


PL-55483


TRANSMISSION GEAR UNIT

TRANSMISSION GEAR UNIT


ILLUS.	PART NO.	NAME OF PART	AMT.
PL-55483			
1	NS-032-29	Stop Nut 1/2-20 Flexloc.....	1
2	WS-008-13	Washer - Retaining.....	1
3	BB-020-18	Ball Bearing.....	1
4	WS-010-18	Washer - Bearing Shim (0.002 In. Thk.).....	AR
5	WS-010-19	Washer - Bearing Shim (0.003 In. Thk.).....	AR
6	WS-010-20	Washer - Bearing Shim (0.010 In. Thk.).....	AR
7	00-107145	Spacer - Planetary Shaft.....	1
8	00-124730	Sleeve - Roller Clutch Drive.....	1
9	00-109070-00002	Key.....	1
10	00-124729	Clutch - Roller.....	10
11	00-124732	Spring - Roller.....	10
12	00-124752	Gear - Slow Speed (46T).....	1
13	00-124733-00002	Gear - Bevel (46T).....	1
14	00-124744	Gear - Clutch (29T).....	1
15	00-012695	Bearing - Clutch Gear.....	1
16	00-012430-00059	Key - Clutch Sleeve.....	2
17	00-070035-00001	Sleeve - Clutch.....	1
18	00-012695	Bearing - Clutch Gear.....	1
19	00-124743	Gear - Lower Clutch (38T).....	1
20	00-012723	Spacer - Lower.....	1
21	BB-020-06	Ball Bearing.....	1
22	00-012430-00017	Key 1/8 x 1/8 x 2-7/16.....	1
23	00-067500-00075	O-Ring.....	1
24	00-124734	Shaft - Planetary.....	1
25	00-437342	Spacer - Bearing (O-Ring).....	1
26	00-067500-00078	O-Ring.....	1
27	00-114695	Seal - Oil.....	1
28	00-124946	Washer (1/32 Thk.).....	1
29	WS-030-83	Washer - Retaining (STL).....	1
30	00-010928-00002	Nut - Special.....	1
31	00-024715-00003	Acorn Nut 1/2-20.....	1
32	00-012710	Nut - Retaining.....	2
33	WS-006-36	Washer - Retaining.....	1
34	BB-005-02	Ball Bearing.....	1
35	00-012744	Spacer - Upper.....	1
36	00-291236	Shaft - Transmission (15T).....	1
37	00-124736	Gear (32T).....	1
38	00-435297	Key.....	1
39	00-012697	Spacer - Lower.....	1
40	00-435297	Key.....	1
41	00-124760	Gear (23T).....	1
42	RR-004-18	Retaining Ring.....	1
43	BB-005-01	Ball Bearing.....	1
44	SL-002-08	Spring - Loading.....	1
45	00-012710	Nut - Retaining.....	2
46	WS-006-36	Washer - Retaining.....	1
47	BB-005-02	Ball Bearing.....	1
48	00-124745	Washer.....	1
49	00-124765-00001	Spacer - Gear.....	1
50	00-124748	Gear (15T).....	1
51	00-012430-00004	Key 1/8 x 1/8 x 1-1/4.....	1
52	00-124751-00003	Worm Wheel & Bushing Assy. (60 Hz.).....	1
53	00-124749-00002	Worm Wheel & Bushing Assy. (50 Hz.).....	1
54	00-291128	Shaft - Worm Wheel.....	1
55	BB-005-01	Ball Bearing.....	1
56	SL-002-08	Spring - Loading.....	1
	00-292799-00002	Planetary Shaft Assy. (Incls. Items 7, 8, 9, 12 thru 20, & 23).....	1
	00-292800	Transmission Shaft Assy. (Incls. Items 33 thru 40).....	1
	00-292798-00001	Worm Wheel Shaft Assy. (60 Hz.) (Incls. Items 46 thru 50 & 52).....	1
	00-292798-00002	Worm Wheel Shaft Assy. (50 Hz.) (Incls. Items 46 thru 49, 51, & 52).....	1

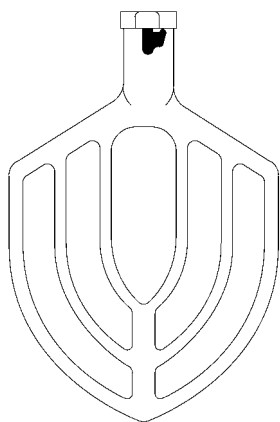


1-2

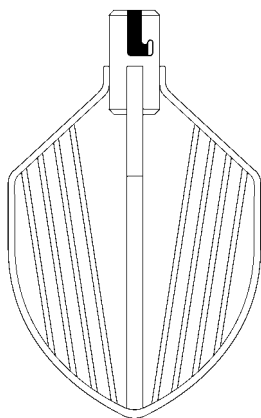

3

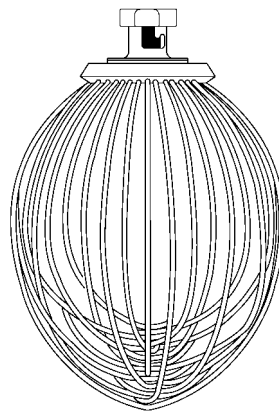

4

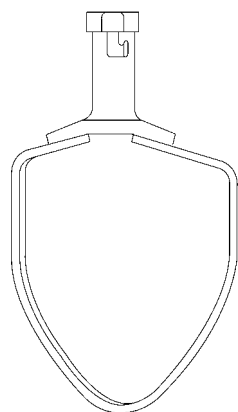

5

PL-55564

AGITATORS

AGITATORS

ILLUS.	PART NO.	NAME OF PART	AMT.
PL-55564			
1	00-275549	"B" Flat Beater (Packaged).....	1
2	00-275551	"B" Flat Beater (SST) (Packaged).....	1
3	00-295166	"C" Wing Whip (Packaged).....	1
4	00-275895	"D" Wire Whip (SST) (Packaged).....	1
5	00-315692	"P" Pastry Knife (Packaged).....	1

